

دليل المستخدم



USER'S MANUAL

RADIATEUR
TURBOHEAT

مدفأة
توربو هيت



ML-TH-EH2000-BK

2000W

General Safety Warning:

1. Read all instructions carefully before using.
2. Make sure the voltage is the same as that indicated on the rating plate of the appliance.
3. Do not operate this appliance if the cable or plug becomes damaged.

4. Keep the appliance and cable away from sources of heat, sharp objects or anything that may cause damage.
5. If the cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.
6. Ensure the appliance is switched off before connecting to the mains power supply.
7. Switch off the power supply and disconnect from mains supply when not in use, before cleaning or other maintenance.
8. Turn off the light Switch, disconnect the power supply.
9. The heater must not be located immediately below a socket-outlet.
10. Do not operate in areas where gasoline, paint or other flammable liquids are used or stored.
11. Indoor use only.
12. In order to avoid overheating, do not cover the heater.
13. To prevent a possible fire, do not block air intakes or exhaust in any manner.
14. Don't touch the hot surfaces.
15. Do not insert or allow foreign objects to enter any ventilation or exhaust opening, as this may cause an electric shock, fire or damage to the appliance.
16. Always ensure that hands are dry before operating or adjusting any switch on the product or touching the plug and socket-outlet.
17. This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
18. Children should be supervised to ensure that they do not play with the appliance.
19. Do not leave this appliance unattended when it's in use.
20. The most common cause of overheating is deposits of dust or fluff in the appliance. Ensure these deposits are removed regularly by disconnect the appliance and vacuum cleaning air vents and grilles.
21. Do not place the heater on carpet, don't place the cable under carpets. Arrange cord away from traffic areas so that it will not be tripped over.
22. Do not use this heater in the immediate surroundings of a bath, a shower or a swimming pool.

23. Do not store away until the heater cools down, store the heater in cool dry location when not in use.


24. When in use, keep the distance between window(wall) at least 50cm

Technical Specifications:

Model	200K
Rated Voltage	220 V -240V~
Rated Frequency	50-60 Hz
Rated Power	2000W

Assembly

1. Insert the wheels into the bottom part of the supporting feet, and to be sure it is tight enough.
2. Put the appliance with upside down, fix the to the appliance with screw

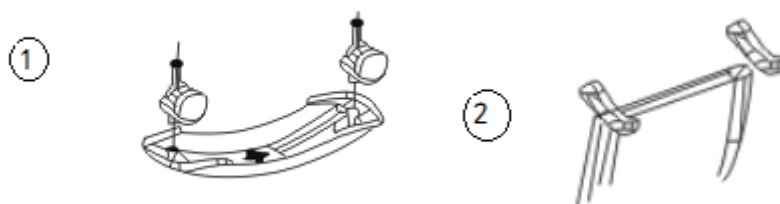

Utilization:

- Connect the appliance to safety socket.
- Turn on switch to the heating position (I or II).
- The heating functions(II)

Heat setting I	1000W
Heat setting II	2000W

- Turn the thermostat knob in the direction of clockwise until reaching the maximum temperature.
- Once the room temperature is reached, slowly turn the thermostat knob in the direction of anticlockwise until you get your required temperature.

- Turn the switch to “0” position to switch off the heater. Unplug the appliance then after.

Overheat safety device

- Your heater is fitted with a safety device to switches off the heater in the event of overheating. If the safety device operated, please turn the heater off, unplug the appliance and let it completely cool, inspect for blockage of air inlet or outlet, attempting to restart the heater then after.
- If the heater fails to operate or the safety device switches the heater off again, return heater to your nearest service center for examination or repair.

Maintenance:

1. Always disconnect the appliance and let it completely cool before any maintenance.
2. Use a vacuum cleaner to remove dust on grilles.
3. Clean the outside of the unit with a damp cloth and then dry it with a dry cloth. Never immerse the unit in water, nor let water drip into the unit.

Storing:

1. Always disconnect the appliance, let it completely cool and clean it before storing.
2. If you do not use the device for a long period, put back the unit and the instruction manual to the original carton and store in a dry and ventilated place.
3. Do not place any heavy items on top of carton during storing as this may damage the appliance.

Recycling (Disposal of the product at the end of its life)



Waste Electrical Products Should Not Be Disposed Of With Household Waste. Please Recycle Where Facilities Exist. Check With Your Local Authority For Recycling Advice.

جهاز الحماية من ارتفاع الحرارة

تم تزويد المدفأة بجهاز أمان يقوم بإيقاف تشغيلها تلقائيًا في حالة ارتفاع درجة الحرارة. إذا تم تفعيل جهاز الأمان، يرجى إيقاف المدفأة وفصلها عن الكهرباء وتركها تبرد تمامًا، ثم فحص ما إذا كانت فتحات دخول أو خروج الهواء مسدودة قبل إعادة تشغيلها. إذا استمرت المدفأة في العمل ثم قام جهاز الأمان بإيقافها مرة أخرى، فيجب إرسالها إلى أقرب مركز صيانة للفحص أو الإصلاح.

الصيانة

افصل الجهاز دائمًا عن الكهرباء واتركه يبرد تمامًا قبل إجراء أي صيانة. استخدم المكنسة الكهربائية لإزالة الغبار من الشبكات. نظف الجزء الخارجي للجهاز بقطعة قماش مبللة ثم جففه بقطعة قماش جافة. لا تغمر الجهاز في الماء مطلقًا، ولا تسمح بتسرب الماء إلى داخله.

التخزين

افصل الجهاز دائمًا عن الكهرباء، واتركه يبرد تمامًا ونظفه قبل التخزين. إذا لم تستخدم الجهاز لفترة طويلة، أعد الجهاز ودليل التعليمات إلى الكرتون الأصلي وخزنه في مكان جاف وجيد.

التهوية

لا تضع أي أشياء ثقيلة فوق الكرتون أثناء التخزين، لأن ذلك قد يتسبب في تلف الجهاز.

إعادة التدوير

(التخلص من المنتج عند نهاية عمره الافتراضي)

يجب عدم التخلص من المنتجات الكهربائية ضمن النفايات المنزلية.

يرجى إعادة تدوير المنتج حيثما تتوفر مرافق إعادة التدوير.



استشر السلطات المحلية أو جهة البيع للحصول على معلومات حول إعادة التدوير المناسبة.

23. لا تقم بتخزين المدفأة قبل أن تبرد تمامًا

24. عند عدم الاستخدام، احفظ المدفأة في مكان بارد وجاف

أثناء الاستخدام، يجب الحفاظ على مسافة لا تقل عن 50 سم بين الجهاز والنافذة أو الجدار


المواصفات الفنية

الطراز	200K
الجهد الكهربائي المقنن	220 V -240V~
التردد المقنن	50-60 Hz
القدرة المقننة	2000W

التركيب

1. أدخل العجلات في الجزء السفلي من الأرجل الداعمة، وتأكد من تثبيتها بإحكام

2. ضع الجهاز مقلوبًا وثبت الأرجل بالجهاز باستخدام البراغي

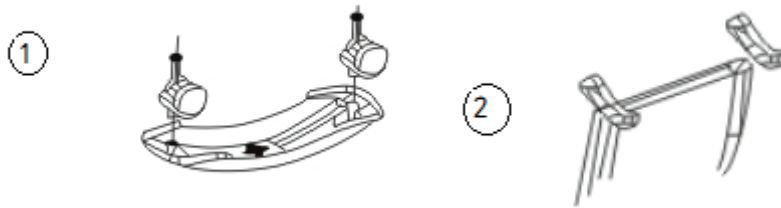

طريقة الاستخدام

قم بتوصيل الجهاز بمقبس كهربائي آمن

(I أو II) شغل المفتاح على وضع التسخين

I الوضع	1000W
II الوضع	2000W

أدر مقبض منظم الحرارة باتجاه عقارب الساعة حتى الوصول إلى أقصى درجة حرارة

بعد الوصول إلى درجة حرارة الغرفة المطلوبة، أدر مقبض منظم الحرارة ببطء عكس اتجاه عقارب الساعة حتى تحصل

على درجة الحرارة المناسبة المطلوبة

..أدر المفتاح إلى الوضع "0" لإيقاف تشغيل المدفأة، ثم افصل الجهاز من الكهرباء بعد ذلك

دليل التعليمات

1. اقرأ جميع التعليمات بعناية قبل الاستخدام
2. تأكد من أن الجهد الكهربائي مطابق لما هو موضح على لوحة بيانات الجهاز
3. لا تقم بتشغيل هذا الجهاز إذا تعرض السلك أو القابس للتلف
4. أبقِ الجهاز والسلك بعيداً عن مصادر الحرارة والأجسام الحادة أو أي شيء قد يسبب تلفاً
5. إذا تعرض سلك الطاقة للتلف، فيجب استبداله من قبل الشركة المصنعة أو وكيل الخدمة أو أشخاص مؤهلين مماثلين
6. لتجنب أي خطر
7. تأكد من إيقاف تشغيل الجهاز قبل توصيله بمصدر الكهرباء الرئيسي
8. قم بإيقاف تشغيل مصدر الطاقة وافصل الجهاز عن الكهرباء عند عدم الاستخدام، وقبل التنظيف أو إجراء أي صيانة
9. أطفئ مفتاح الإضاءة وافصل مصدر الطاقة
10. يجب عدم وضع المدفأة مباشرة أسفل مقبس كهربائي
11. لا تقم بتشغيل الجهاز في الأماكن التي يتم فيها استخدام أو تخزين البنزين أو الطلاء أو أي سوائل قابلة للاشتعال
12. للاستخدام الداخلي فقط
13. لتجنب ارتفاع درجة الحرارة، لا تقم بتغطية المدفأة
14. لمنع خطر الحريق، لا تسد فتحات دخول أو خروج الهواء بأي شكل من الأشكال
15. لا تلمس الأسطح الساخنة
16. لا تدخل أو تسمح بدخول أجسام غريبة إلى فتحات التهوية أو مخارج الهواء، لأن ذلك قد يسبب صدمة كهربائية أو حريقاً أو تلفاً للجهاز
17. تأكد دائماً من أن يديك جافتان قبل تشغيل أو ضبط أي مفتاح في المنتج أو قبل لمس القابس أو المقبس الكهربائي
18. هذا الجهاز غير مخصص للاستخدام من قبل الأشخاص (بما في ذلك الأطفال) ذوي القدرات الجسدية أو الحسية أو الذهنية المحدودة، أو الذين يفتقرون إلى الخبرة والمعرفة، إلا إذا تم الإشراف عليهم أو إعطاؤهم التعليمات المتعلقة باستخدام الجهاز من قبل شخص مسؤول عن سلامتهم
19. يجب مراقبة الأطفال للتأكد من أنهم لا لعبثون بالجهاز
20. لا تترك هذا الجهاز دون مراقبة أثناء التشغيل
21. السبب الأكثر شيوعاً لارتفاع درجة الحرارة هو تراكم الغبار أو الوبر داخل الجهاز
22. تأكد من إزالة هذه الترسبات بانتظام عن طريق فصل الجهاز وتنظيف فتحات التهوية والشبكات باستخدام المكنسة الكهربائية
23. لا تضع المدفأة على السجاد، ولا تمرر السلك تحت السجاد
24. قم بترتيب السلك بعيداً عن أماكن المرور لتجنب التعثر به
25. لا تستخدم هذه المدفأة في الأماكن القريبة مباشرة من حوض الاستحمام أو الدُش أو المسبح



Importateur : ELECTRO MEGALUX

Adresse : Hay Beausejour, Avenue Al Hoceima N° 6 Tanger, Maroc
MADE IN CHINA



www.megalife.ma

المستورد : الكترو ميغالوكس
العنوان : حي بوسيجور شارع الحسيمة رقم 6 طنجة المغرب
صنع في الصين

