

دليل المستخدم



# USER'S MANUAL

CONVECTEUR  
WALLHEAT SMART

سخان حراري  
ذكي



ML-TH-CWP2000-BK

2000W

# Instruction Manual

## TECHNICAL DATA

|               |                    |
|---------------|--------------------|
| Model         | ML-TH-CWP2000-BK   |
| RATED VOLTAGE | AC220-240V/50/60Hz |
| POWER         | 1800-2000W         |

## GENERAL DIRECTIONS

1. Remove the packaging and make sure that the appliance is intact. If in doubt, do not use it and contact our Technical Assistance Centre. Packaging materials (plastic bags, polystyrene, staples etc.) must be kept out of the reach of children as they could be hazardous.  
Caution:
  - The appliance must only be used by responsible adults;
  - For their own safety, children and persons with reduced mental capacities must not use the appliance unless under the supervision of responsible adults;
2. Before connecting the appliance, check that the appliance rating corresponds to the mains rating.
3. If the power cable is damaged, it must be replaced by the manufacturer or otherwise by a qualified person in order to prevent any risk.
4. This appliance must only be used for the purpose for which it has been manufactured, i.e. for additional electrical heating in rooms. Any other use is considered improper and therefore dangerous. The manufacturer is not responsible for any damage caused by improper, incorrect or unreasonable use.
5. Before cleaning or carrying out maintenance on the appliance, disconnect it from the electrical mains by removing the plug from the electrical outlet or by switching off the system switch.
6. If the appliance is faulty and/or operating incorrectly, switch it off without tampering with it. If the above is disregarded, the safety of the appliance may be compromised.
7. Switch off the appliance and remove the plug from the electrical outlet when not in use.
8. The use of any electrical appliance calls for the awareness of some basic rules, such as:
  - do not use the appliance near sources of water such as baths, showers or swimming pools
  - do not touch the appliance with wet or damp hands or feet
  - do not leave the appliance exposed to atmospheric agents
9. Do not use the appliance in the presence of potentially flammable or explosive liquids or gases.

## IMPORTANT

1. In order to avoid overheating, it is advisable to unwind the entire length of the power cord.
2. Check that the electric capacity of the system and the power outlets are adequate for the maximum power stated on the plate. If in doubt, please contact a qualified professional.

3. Do not leave the appliance plugged in when not required. Unplug the appliance from the mains after having switched it off when not in use.
4. Do not obstruct the ventilation or heat dispersion openings.
5. The power cord on this appliance must not be replaced by the user. If the cord is damaged or requires replacement, contact qualified personnel only.
6. Avoid the hot contact, checking that the cord is not placed in front of the hot air outlet grille.
7. Do not use near bathtubs, showers or basins (minimum distance 1 metre).
8. Use in an upright position.
9. Keep the suction grille clean.
10. Do not use the appliance immediately below a fixed power outlet.

### **WARNING**


In order to avoid overheating, do not cover the heater.

### **CAUTION**

1. Some parts of this product can become very hot and cause burns. Particular attention has to be given where children and vulnerable people are present.
2. The heater must not be located immediately below a socket-outlet.
3. Do not use this heater in the immediate surroundings of a bath, a shower or a swimming pool.
4. Cleaning and user maintenance shall not be made by children unless they are older than 8 and supervised.
5. Keep the appliance and its cord out of reach for the children less than 8 years.
6. If the supply cord is damaged, it must be replaced by the manufacturer or its service agent or a similarly qualified person in order to avoid a hazard.
7. Children of less than 3 years should be kept away unless continuously supervised.
8. Children aged from 3 years and less than 8 years shall only switch on/off the appliance which provided that it has been placed or installed in its intended normal operating position, and they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved.
9. Children aged from 3 years and less than 8 years shall not plug in, regulate and clean the appliance or perform user maintenance.

### **FOOT ASSEMBLY**

Before using the heater , the feet (supplied separately in the cartoon) , must be fitted to the unit. These are to be attached to the base of the heater using the 4 self-tappingscrews provided , taking care to ensure that they are located correctly in the bottom ends of the heater side moldings.

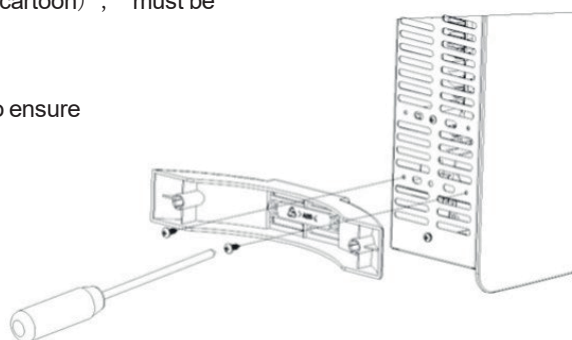

## Operation panel function introduction



- 5. Display
- 6. Open window function indicate
- 7. Anti-frost indicator indicate
- 8. WiFi indicator
- 9. Timer indicator
- 10. Plus button indicate
- 11. Power setting button
- 12. Power button
- 13. Fan
- 14. Low heating indicate
- 15. High heating indicate
- 16. Child lock indicate
- 17. Minus button
- 18. Timer setting
- 19. Heat indicate

## Usage:

1. Please check before you use:
  - A: The heating element and electric wire cannot be broken.
  - B: Please do not use the socket lower than 16A for fear of any accident.
2. Use the fan heater on the flat place to avoid being toppled.

|                                                                                                            |                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                          |
|------------------------------------------------------------------------------------------------------------|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
|                          | <ol style="list-style-type: none"> <li>1. Press “” Display ambient temperature, the product enters standby mode.</li> <li>2. Press “” as follows: Low heat, High heat.</li> <li>3. Press “” to set timer as follows: 1H,2H,3H.....24H</li> <li>4. Press “” “” to set temperature, Temperature range: 18-45°C.</li> <li>5. To set the child lock, press and hold the  UP button 3 seconds.<br/>The  will appear on the screen and the control panel will be locked out. To release, press and hold the down  button 3 seconds. The child lock will disappear, indicating that all the buttons can be used again.</li> <li>6. Press “” 3 seconds, Enter anti-frost protection mode, Unable to operate the “ ”, you need to long press the “” to exit,)</li> <li>7. Press “” 3 seconds, enter open window function mode, long press “” to exit</li> <li>8. Press “” 3 seconds, enter  fan mode, long press  to exit  mode</li> </ol> |
|  Smartphone application | <p>The mobile phone must be connected to the Internet</p> <ol style="list-style-type: none"> <li>1. download and install the “Tuya Smart” application</li> <li>2. Enter the application:”Login” . Make sure that your heater and smartphone are as close as possible and connected to the WIFI router.</li> <li>3. Press the “+” button to add the new appliance to the program. Select the type of the appliance:”Small home appliances”, and select “Heaters(Wi-Fi)</li> <li>4. Press “” until the WIFI symbol starts to flash on the display of the heater.</li> <li>5. Enter the password of the WIFI network, press the “Next” button. Select in the application that the heater’s WIFI indicator blinks quickly. After this, pairing runs, the heater connects to the cloud-based application.</li> </ol> <p>Using the application, you can control weekly timer and all function of the heater</p> <p>Notes: When the wifi function is disabled, MON is displayed by default,</p>                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                              |

and the date of the week is displayed after the wifi is connected

Download and install the "Tuya smart" application.

**Method A:Internet APP downloads**

- ① Open the "APP Store" on the mobile phone
- ② Enter "tuya smart" and click Search;
- ③ Click to get and begin to download and install;

**Method B:Scan the QR code**

- ① Open the phone and scan the QR code
- ② Click open from the browser;
- ③ Click to download and install;



## CONNECTING THE APPLIANCE TO WIFI

### DOWNLOAD THE APP TO YOUR PHONE

Download the "TUYA SMART" app, from your chosen app store, using the QR codes below, or by searching for the app in your chosen store.



IOS



Android

## Maintenance:

1. Please make sure the plug should be put off before cleaning the heater.
2. Strictly prohibit to use water to wash the radiator, it can be cleaned by a piece of soft damp cloth with a little neutral detergent. Please do not use other solvent like gasoline.
3. The fan heater must be used or stored after cooled and dried completely.
4. If stop using heater, please put off the plug from the socket, and store it in the dry place with a rust-proof polybag, original packing is favored.

## Warranty Information

The manufacturer provides warranty in accordance with the legislation of the customer's own country of residence, with a minimum of 1 year , starting from the date on which the appliance is sold to the end user.


The warranty only covers defects in material or workmanship.

The repairs under warranty may only be carried out by an authorized service centre.

When making a claim under the warranty, the original bill of purchase (with purchase date) must be submitted.

The warranty will not apply in cases of:

- Normal wear and tear
- Incorrect use, e.g. overloading of the appliance, use of non-approved accessories
- Use of force, damage caused by external influences
- Damage caused by non-observance of the user manual, e.g. connection to an unsuitable mains supply or non-compliance with the installation instructions
- Partially or completely dismantled appliance
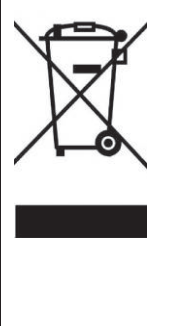
| Correct Disposal of this product                                                   |                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                   |
|------------------------------------------------------------------------------------|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
|  | <p>This marking indicates that this product should not be disposed with other household wastes throughout the EU. To prevent possible harm to the environment or human health from uncontrolled waste disposal, recycle it responsibly to promote the sustainable reuse of material resources. To return your used device, please use the return and collection systems or contact the retailer where the product was purchased. They can take this product for environmental safe recycling.</p> |

الجهاز الذي تم تفكيكه جزئيًا أو كليًا  
التخلص الصحيح من المنتج

تشير هذه العلامة إلى أنه لا ينبغي التخلص من هذا المنتج مع النفايات المنزلية الأخرى في جميع أنحاء الاتحاد الأوروبي

ولمنع أي ضرر محتمل على البيئة أو صحة الإنسان نتيجة التخلص غير المنضبط من النفايات، يرجى إعادة تدويره بشكل مسؤول للمساهمة في إعادة الاستخدام  
المستدام للموارد المادية

لإرجاع الجهاز المستخدم، يرجى استخدام أنظمة الإرجاع والتجميع المتاحة أو التواصل مع المتجر الذي تم شراء المنتج منه، حيث يمكنهم المساعدة في التخلص من المنتج  
بطريقة آمنة وصديقة للبيئة



Wi-Fi. وسيتم عرض يوم الأسبوع بعد اتصال الجهاز بشبكة الـ

Tuya Smart تنزيل وتثبيت تطبيق  
الطريقة الأولى: التحميل عبر متجر التطبيقات  
افتح متجر التطبيقات على الهاتف المحمول  
واضغط على بحث Tuya Smart اكتب  
اضغط على تنزيل ثم ابدأ التثبيت  
QR الطريقة الثانية: مسح رمز  
QR افتح كاميرا الهاتف وامسح رمز  
اضغط على الرابط الذي يظهر في المتصفح  
اضغط على تنزيل ثم تثبيت التطبيق  
Wi-Fi توصيل الجهاز بشبكة  
قم بتنزيل التطبيق على هاتفك



الموجودة QR من متجر التطبيقات المناسب لهاتفك، باستخدام رموز Tuya Smart قم بتنزيل تطبيق  
أو عبر البحث عن اسم التطبيق في متجر التطبيقات الخاص بك



IOS



Android

## الصيانة

تأكد من فصل القابس الكهربائي قبل تنظيف المدفأة  
يُمنع تمامًا استخدام الماء لتنظيف المدفأة  
يمكن تنظيف الهيكل الخارجي بقطعة قماش ناعمة ورطبة قليلاً مع القليل من المنظف، ويُمنع  
استخدام البنزين أو أي مواد مشابهة  
يجب استخدام المدفأة أو تخزينها فقط بعد أن تبرد وتجف تمامًا  
إذا توقفت عن استخدام المدفأة، فصل القابس من المقبس الكهربائي واحفظ الجهاز في مكان جاف  
باستخدام كيس واثق من الغبار، ويفضل الاحتفاظ به داخل العبوة الأصلية

## معلومات الضمان

تقدم الشركة المصنعة ضماناً وفقاً للتشريعات المعمول بها في بلد إقامة العميل، لمدة لا تقل عن سنة  
واحدة، ابتداءً من تاريخ بيع الجهاز للمستخدم النهائي

يغطي الضمان فقط العيوب الناتجة عن المواد أو التصنيع

لا يجوز إجراء الإصلاحات المشمولة بالضمان إلا من قبل مركز خدمة معتمد

• عند تقديم طلب الضمان، يجب إرفاق فاتورة الشراء الأصلية التي تتضمن تاريخ الشراء

## لا يشمل الضمان الحالات التالية:

التآكل أو الاستخدام الطبيعي للجهاز  
• سوء الاستخدام، مثل تحميل الجهاز فوق طاقته أو استخدام ملحقات غير معتمدة  
الاستخدام القسري أو التلف الناتج عن عوامل خارجية  
الأضرار الناتجة عن عدم الالتزام بتعليمات دليل الاستخدام، مثل التوصيل بمصدر طاقة غير مناسب أو  
عدم اتباع تعليمات التركيب

#### تعليمات التشغيل

اضغط على زر التشغيل/الإيقاف لعرض درجة حرارة الغرفة، وسيدخل الجهاز في وضع الاستعداد.  
اضغط على زر إعداد الطاقة للتبديل بين أوضاع التسخين التالية

تسخين منخفض

تسخين مرتفع

اضغط على زر المؤقت لضبط الوقت كما يلي

ساعة، 2 ساعة، 3 ساعات ... حتى 24 ساعة 1

اضغط على زري الزيادة (+) أو التخفيض (-) لضبط درجة الحرارة

نطاق ضبط الحرارة: من 18 إلى 45 درجة مئوية

قفل الأطفال

لتفعيل قفل الأطفال، اضغط مطولاً على زر الزيادة (+) لمدة 3 ثوانٍ

سيظهر رمز القفل على الشاشة وسيتم تعطيل لوحة التحكم

لإلغاء القفل، اضغط مطولاً على زر التخفيض (-) لمدة 3 ثوانٍ

سيختفي رمز القفل، مما يعني إمكانية استخدام جميع الأزرار مرة أخرى



وضع الحماية من التجمد

اضغط مطولاً على زر إعداد الطاقة لمدة 3 ثوانٍ للدخول إلى وضع الحماية من التجمد

(-) في هذا الوضع، لن يكون بالإمكان استخدام زري الزيادة (+) والتخفيض

للخروج من هذا الوضع، اضغط مطولاً مرة أخرى على زر إعداد الطاقة

وضع النافذة المفتوحة

اضغط مطولاً على زر المؤقت لمدة 3 ثوانٍ لتفعيل وضع النافذة المفتوحة

للخروج من هذا الوضع، اضغط مطولاً على زر المؤقت مرة أخرى

وضع المروحة

اضغط مطولاً على زر التخفيض (-) لمدة 3 ثوانٍ للدخول إلى وضع المروحة

للخروج من وضع المروحة، اضغط مطولاً على زر التخفيض (-) مرة أخرى

تطبيق الهاتف الذكي

يجب أن يكون الهاتف المحمول متصلاً بالإنترنت

Tuya Smart قم بتنزيل وتثبيت تطبيق

افتح التطبيق وسجل الدخول

Wi-Fi تأكد من أن المدفأة والهاتف قريبان من بعضهما ومتصلان بشبكة

اضغط على زر "+" لإضافة الجهاز الجديد إلى التطبيق

اختر نوع الجهاز

الأجهزة المنزلية الصغيرة

ثم اختر

Heaters (Wi-Fi)

بالوميض على شاشة المدفأة Wi-Fi اضغط على زر التشغيل/الإيقاف حتى يبدأ رمز الـ

”ثم اضغط على زر “التالي Wi-Fi أدخل كلمة مرور شبكة الـ

الخاص بالمدفأة يومض بسرعة Wi-Fi حدد في التطبيق أن مؤشر الـ

بعد ذلك ستبدأ عملية الاقتران، وستتصل المدفأة بالتطبيق السحابي

باستخدام التطبيق، يمكنك التحكم بالمؤقت الأسبوعي وجميع وظائف المدفأة

بشكل افتراضي (الاثنين) MON يتم عرض Wi-Fi ملاحظة: عند تعطيل وظيفة الـ



Smartphone application

## شرح وظائف لوحة التشغيل



- 5 شاشة العرض
- 6 مؤشر وظيفة النافذة المفتوحة
- 7 مؤشر الحماية من التجمد
- 8 مؤشر Wi-Fi
- 9 مؤشر المؤقت
- 10 زر الزيادة (+)
- 11 زر ضبط الطاقة
- 12 زر التشغيل / الإيقاف
- 13 وضع المروحة
- 14 مؤشر التسخين المنخفض
- 15 مؤشر التسخين العالي
- 16 مؤشر قفل الأطفال
- 17 زر التخفيض (-)
- 18 ضبط المؤقت
- 19 مؤشر التسخين

طريقة الاستخدام

يرجى التحقق قبل الاستخدام 1.  
أ:

يجب التأكد من أن عنصر التسخين والسلك الكهربائي غير تالفين

ب:

يرجى عدم استخدام مقبس كهربائي ثقل سعته عن 16 أمبير لتجنب أي حوادث

2.

يجب استخدام المدفأة المروحية على سطح مستوٍ لتجنب سقوطها أو انقلابها

- 3 لا تترك الجهاز موصولاً بالكهرباء عند عدم الحاجة إليه. افصل الجهاز عن مصدر التيار الكهربائي بعد إيقاف تشغيله وعدم استخدامه.
- 4 لا تقم بسد أو إعاقه فتحات التهوية أو منافذ خروج الحرارة.
- 5 يجب ألا يتم استبدال سلك الطاقة من قبل المستخدم. إذا تعرض السلك للتلف أو احتاج إلى استبدال، يرجى الاتصال بفني مؤهل فقط.
- 6 تجنب ملامسة سلك الطاقة للشبكة الأمامية لخروج الهواء الساخن.
- 7 لا تستخدم الجهاز بالقرب من أحواض الاستحمام أو الدُش أو المغاسل (مع ترك مسافة لا تقل عن متر واحد).
- 8 استخدم الجهاز في وضعية عمودية.
- 9 حافظ على نظافة شبكة سحب الهواء.
- 10 لا تستخدم الجهاز مباشرة أسفل مقبس كهربائي ثابت.

### تحذير


لتجنب ارتفاع درجة الحرارة، لا تقم بتغطية المدفأة.

### تنبيه

- 1 قد تصبح بعض أجزاء هذا المنتج شديدة السخونة وتتسبب في حروق. يجب توخي الحذر بشكل خاص عند وجود الأطفال أو الأشخاص الضعفاء.
- 2 يجب عدم وضع المدفأة مباشرة أسفل مقبس كهربائي.
- 3 لا تستخدم هذه المدفأة في الأماكن القريبة مباشرة من حوض الاستحمام أو الدُش أو المسبح.
- 4 يجب ألا يقوم الأطفال بعمليات التنظيف أو الصيانة إلا إذا كانوا أكبر من 8 سنوات وتحت الإشراف.
- 5 احفظ الجهاز وسلك الطاقة بعيداً عن متناول الأطفال دون 8 سنوات.
- 6 إذا تعرض سلك التغذية للتلف، فيجب استبداله من قبل الشركة المصنعة أو وكيل الخدمة المعتمد أو شخص مؤهل مماثل لتجنب أي خطر.
- 7 يجب إبعاد الأطفال الذين تقل أعمارهم عن 3 سنوات عن الجهاز ما لم يكونوا تحت إشراف مستمر.
- 8 يمكن للأطفال من عمر 3 سنوات إلى أقل من 8 سنوات تشغيل أو إيقاف الجهاز فقط، بشرط أن يكون الجهاز موضوعاً أو مثبتاً في وضع التشغيل الطبيعي المقصود، وأن يكون الأطفال قد تلقوا الإشراف أو التعليمات المتعلقة باستخدام الجهاز بطريقة آمنة ويفهموا المخاطر المرتبطة به.
- 9 يجب ألا يقوم الأطفال من عمر 3 سنوات إلى أقل من 8 سنوات بتوصيل الجهاز بالكهرباء أو ضبطه أو تنظيفه أو إجراء صيانة المستخدم عليه.

### تركيب القاعدة

قبل استخدام المدفأة، يجب تركيب الأرجل (المرفقة بشكل منفصل داخل العبوة) على قاعدة المدفأة. يتم تثبيت الأرجل باستخدام البراغي الأربعة ذاتية التثبيت المرفقة، مع التأكد من وضعها بشكل صحيح في الأطراف السفلية للجوانب الجانبية للمدفأة.

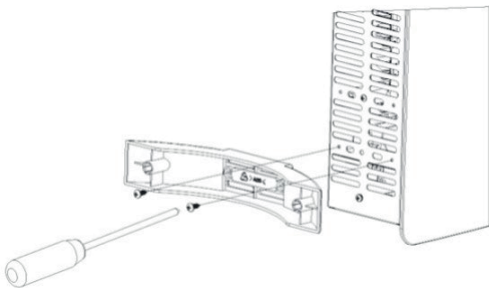

# دليل التعليمات

## البيانات التقنية

|                        |                    |
|------------------------|--------------------|
| الطراز                 | ML-TH-CWP2000-BK   |
| الجهد الكهربائي المقنن | AC220-240V/50/60Hz |
| القدرة                 | 1800-2000W         |

### التعليمات العامة

- 1 قم بإزالة مواد التغليف والتأكد من أن الجهاز سليم وغير متضرر. في حال وجود أي شك، لا تستخدم الجهاز واتصل بمركز الدعم الفني. يجب إبقاء مواد التغليف (الأكياس البلاستيكية، البوليسترين، الدبابيس، إلخ) بعيداً عن متناول الأطفال لأنها قد تشكل خطراً.

### تحذير:

- يجب أن يُستخدم الجهاز فقط من قبل أشخاص مسؤولين.  
حفاظاً على السلامة، يجب عدم استخدام الجهاز من قبل الأطفال أو الأشخاص ذوي القدرات الذهنية المحدودة إلا تحت إشراف أشخاص مسؤولين.
- 2 قبل توصيل الجهاز، تأكد من أن مواصفات الجهاز الكهربائية تتوافق مع مصدر التيار الكهربائي الرئيسي.
- 3 إذا تعرض سلك الطاقة للتلف، فيجب استبداله من قبل الشركة المصنعة أو بواسطة فني مؤهل لتجنب أي مخاطر.
- 4 صُمم هذا الجهاز للاستخدام المحدد له فقط، أي للتدفئة الكهربائية الإضافية داخل الغرف. ويُعتبر أي استخدام آخر استخداماً غير صحيح وخطيراً. ولا تتحمل الشركة المصنعة أي مسؤولية عن الأضرار الناتجة عن سوء الاستخدام أو الاستخدام الخاطئ أو غير المعقول.
- 5 قبل تنظيف الجهاز أو نقله أو إجراء أي صيانة عليه، افصل الجهاز عن مصدر الكهرباء إما بنزع القابس من المقبس الكهربائي أو بإيقاف تشغيل المفتاح الرئيسي.
- 6 إذا كان الجهاز معطلاً أو لا يعمل بشكل صحيح، قم بإيقاف تشغيله دون محاولة العبث به. إن تجاهل هذه التعليمات قد يؤثر على سلامة الجهاز.
- 7 أوقف تشغيل الجهاز وافصل القابس من المقبس الكهربائي عند عدم الاستخدام.
- 8 يتطلب استخدام أي جهاز كهربائي الالتزام ببعض قواعد السلامة الأساسية، مثل:  
عدم استخدام الجهاز بالقرب من مصادر المياه مثل أحواض الاستحمام أو الدُش أو المسابح.  
عدم لمس الجهاز بأيدي أو أقدام مبللة أو رطبة.  
عدم ترك الجهاز معرضاً للعوامل الجوية.
- 9 لا تستخدم الجهاز في وجود سوائل أو غازات قابلة للاشتعال أو الانفجار.

### هام

- 1 لتجنب ارتفاع درجة الحرارة، يُنصح بفك سلك الطاقة بالكامل أثناء الاستخدام.
- 2 تأكد من أن القدرة الكهربائية للنظام والمقابس الكهربائية مناسبة للقدرة القصوى المذكورة على لوحة الجهاز. وفي حال الشك، يُرجى استشارة فني مؤهل.



Importateur : ELECTRO MEGALUX

Adresse : Hay Beausejour, Avenue Al Hoceima N° 6 Tanger, Maroc  
MADE IN CHINA



[www.megalife.ma](http://www.megalife.ma)

المستورد : الكترو ميغالوكس  
العنوان : حي بوسيجور شارع الحسيمة رقم 6 طنجة المغرب  
صنع في الصين

